



INSTALLATION INSTRUCTIONS


Code: A2PORT

The A2PORT is a 2 port spring return actuator with an auxiliary switch. This is for general purpose flow control applications or central heating systems. When correctly wired with an appropriate room thermostat, cylinder thermostat and programmer the valve will control the water from the boiler to hot water and from the boiler to central heating.

This fits the Optimum, Tower, Corgi and Honeywell 2 Port 5 wire Zone Valves. (22mm & 28mm)

Specifications:

- Supply voltage: 240V AC 50Hz
- Power consumption: 6W
- Operating temperature range: +5°C to +88°C
- Cable length - 1 Metre
- Maximum differential pressure for 22mm: 1 Bar
- Maximum static pressure: 10.0 Bar
- Maximum fluid temperature: 100°C
- Maximum ambient temperature: 52°C

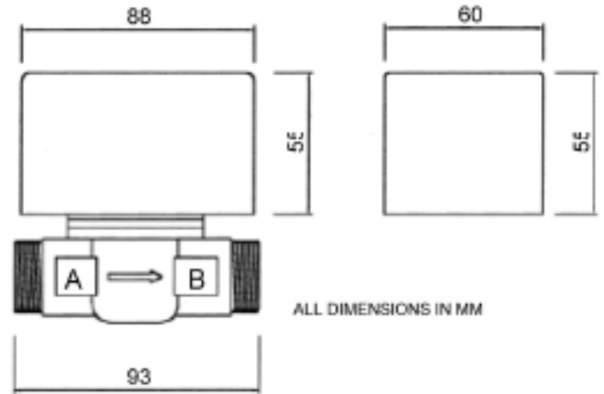

Installation:

Before fitting the valve, read through the plumbing and wiring instructions below. When replacing the valve actuator only, set the Auto/Manual lever to the "Manual Open" position before removal. On the replacement actuator set the Auto/Manual lever to the "Manual Open" position before fitting.

Plumbing:

When connecting to pipe work do NOT use the actuator for leverage. Valves should be held by wrench flats on body. Place the AUTO/MAN lever in the MAN position when filling, venting or draining the system.

! TAKE CARE NOT TO OVERTIGHTEN

Wiring:

! All wiring must be carried out by a competent electrician.

! All controls must be earthed. All valves should have a means of disconnection from electrical mains supply which incorporates a contact separation of at least 3mm in all Poles.

All wiring should be carried out to IEE Regulations;

- Brown - Live
- Orange - End switch Out
- Grey - End switch In
- Blue - Neutral
- Green & Yellow - Earth

Typical wiring circuit using two zone valves, programmer, room thermostat and cylinder thermostat

